


Drilling template

Vores skæreskabelon til X-Protect-serien er specifikt designet til at opretholde præcisionen i dine sikkerhedstegninger. Fremstillet med skarphed og brugervenlighed for øje, effektiviserer dette værktøj installationsprocessen og gør det nemt at justere længderne efter dine specifikke behov uden at gå på kompromis med sikkerhedskvaliteten.

Denne mall er primært beregnet til brug ved tilpasninger af påkørselsbeskyttelse.

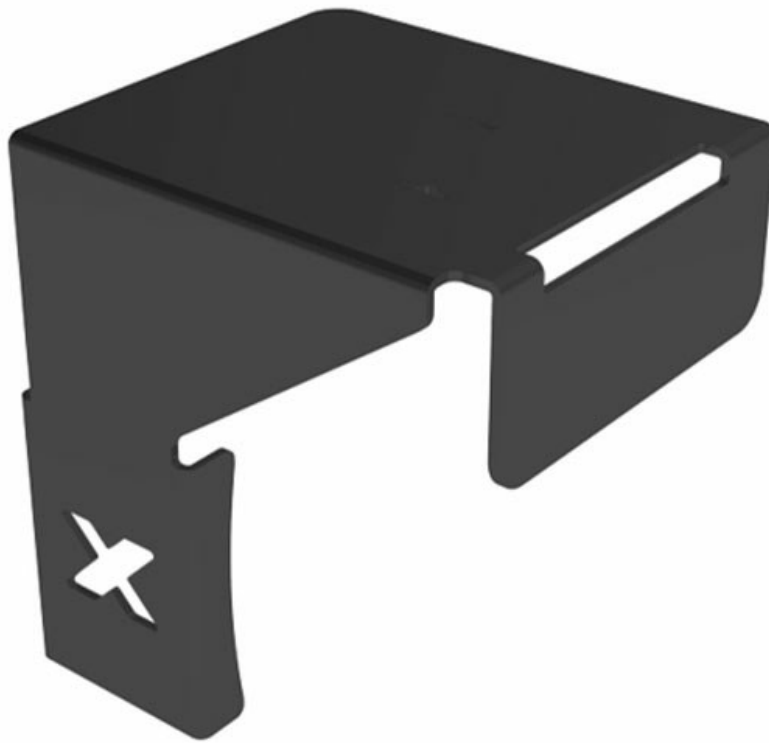

Vores skæreskabelon til X-Protect-serien er specielt designet til at opretholde præcisionen i dine sikkerhedsdesigns. Fremstillet med skarphed og brugervenlighed for øje, effektiviserer dette værktøj installationsprocessen og gør det enkelt at justere længder efter dine specifikke behov uden at gå på kompromis med sikkerhedskvaliteten.

Denne mal er primært beregnet til brug ved ændringer af påkørselsbeskyttelse.

Skæreskabelon er udviklet til at garantere, at hullerne til forbindelsesstolperne placeres korrekt hver gang. Denne opmærksomhed på detaljer sikrer, at påkørselsbeskyttelsen bevarer sine fulde beskyttelsesegenskaber, selv efter justeringer i længden. Med dette værktøj kan risikoen for fejlagtigt placerede komponenter minimeres, og muligheden for en problemfri og glat installation kan maksimeres.

Ved at forenkle opgaven med at skære barriererne til den ønskede længde sparer boremallen ikke kun tid, men reducerer også arbejdskraftomkostningerne og minimerer fejlrummet. Dens intuitive design betyder, at den let kan bruges på stedet, hvilket sikrer en hurtig og præcis justeringsproces, der holder dit projekt på planen uden at gå på kompromis med sikkerheden.

Modeller

ARTIKLER / BESKRIVELSE




RC-DRILL

Drilling template and drill bit kit

X-Protect is Safe

- ✓ Our impact protection products undergo rigorous testing at our state-of-the-art testing facility.
- ✓ With decades of experience in industrial safety, we've designed our impact protection to perform effectively in real-world conditions.
- ✓ We know safety and can guide you to the best solutions tailored to your specific needs.

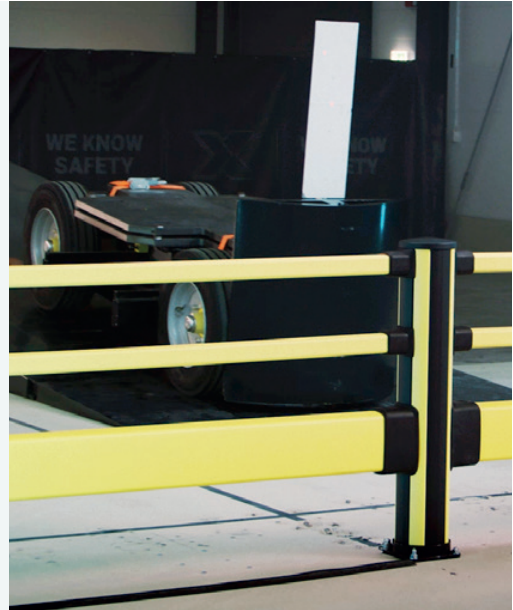

X-Protect is Modular

- ✓ Quickly modify barrier specifications with minimal waste.
- ✓ Perform easy and cost-effective repairs at a component level.
- ✓ Quickly build strong integrated installations with few parts.



X-Protect is Sustainable

- ✓ Simple end of life dis-assembly, even after an accident.
- ✓ Single material components that are easy to recycle.
- ✓ Repairable by design, damaged or worn components are easily replaced extending the barrier's life.



X-Protect components

These are the building blocks of our modular Impact Protection range.

BARRIERS & RAILS

Hand Rails



Width x Height:

68 x 72 mm | 2 11/16" x 2 27/32"

Length:

270 - 1770 mm | 10 5/8" - 69 11/16"

Impact Barriers



Width x Height:

116 x 220 mm | 4 9/16" x 8 21/32"

Length:

270 - 2770 mm | 10 5/8" - 109 1/16"

POSTS & BOLLARDS



Height:

350 - 1160 mm

13 13/16" -

45 11/16"

Width:

200 mm

7 7/8" in



Component Colours



RAL 1018




RAL 9011

X-Protect Standard Configurations

+ the highest impact energy (J) they are capable of withstanding*



* The highest force depends on the C-C. More information is available upon request.

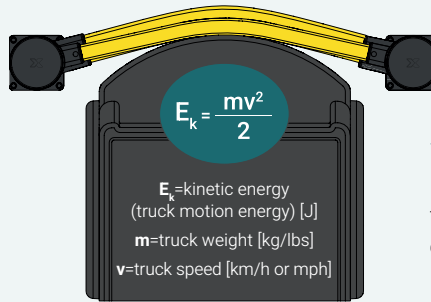

Impact testing

This is how we calculate the energy from a vehicle impact.



Loaded weight
3600 kg / 7930 lbs



Loaded weight
2700 kg / 5940 lbs




Loaded weight
2100 kg / 4620 lbs

Speed	Load
6 km/h 3.7 mph	5020 J
8 km/h 5 mph	8880 J
12 km/h 7.5 mph	19960 J

Speed	Load
6 km/h 3.7 mph	3770 J
8 km/h 5 mph	6660 J
12 km/h 7.5 mph	14970 J

Speed	Load
6 km/h 3.7 mph	2930 J
8 km/h 5 mph	5180 J
12 km/h 7.5 mph	11670 J


Operating temperature

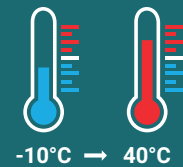

Assembly



SCAN THE CODE TO
 DOWNLOAD OUR
 ASSEMBLY MANUALS

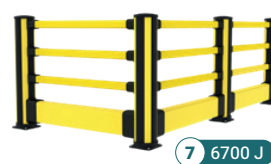

The Floor Barrier can be used in combination with configurations: **3, 6, 8 & 9**

1. Bollards
2. Impact
3. Impact High
4. Double Impact Low
5. Double Impact High
6. Pedestrian
7. Pedestrian + Impact
8. Pedestrian + Impact High
9. Pedestrian + Double Impact
10. Pedestrian Gate
11. Column Guard
12. Floor Barrier